

## Thrustmaster TFRP T.Flight Rudder Pedal Refit

Combat pedals shown, same technique used for the other pedals


1. Remove the four screws and heel brackets from the TFRP pedal assemble, using the Allen key/Hex key provided
2. Locate the screw heads into the refit pedal, hold the pedal upside down. Both refit pedals are the same, so there is no left or right.



**NOTE:** This is a little fiddly, and best performed in an area where you can find the screw if/when you drop it!



3. Use the Allen key to align the screw with the hole, turn the pedal through 90 degrees

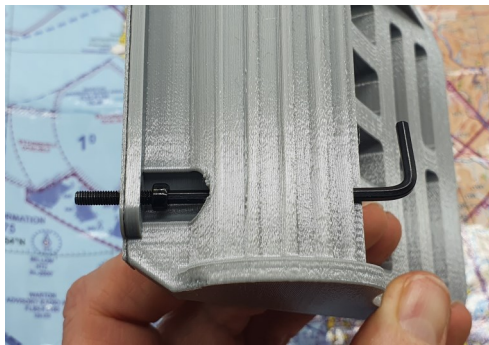

4. Align the screws with the TFRP pedal holes, tighten the first screw (left or right) to about half way then the other side.



**NOTE:** Ensure the pedal is flush during the tightening. If not loosen the screws before adjusting

5. Repeat for the other side.

**That's it, enjoy the real feel of heels on the floor flying.**

**Don't forget to Check out the website!!**

**Mimics**  
MIMICS AT STROLLERWEB

<https://mimics.strollerweb.co.uk>